


GP PRO ActiveAire® Automated Freshener Dispenser Settings

Three Settings:

Setting	Action
NORMAL factory default	40 second fan
BATTERY SAVER	20 second fan
HAND WAVE ONLY	30 second fan




Hand Wave Sensor & Indicator Lights

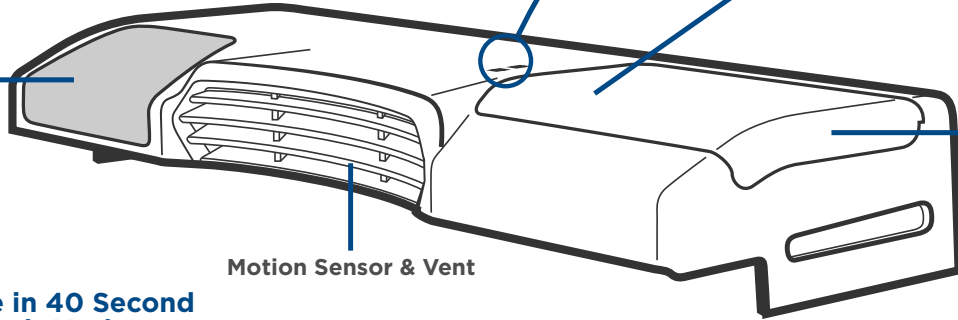



Motion Sensor & Vent

Refill Reset Button

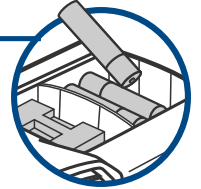

Install Batteries


Use Key To Open

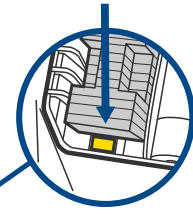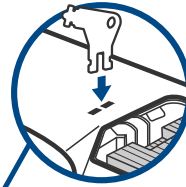


Average Battery Life in 40 Second Normal Factory Default Mode:

Indicator	Status	Action
LOW	< 20 visits	12-18 months
MEDIUM	20-50 visits	7-12 months
HIGH	> 50 visits	6 months or less



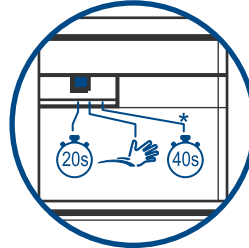


*Individual Results May Vary

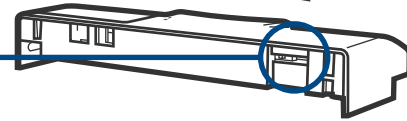

Activated Control Switch (On Back)



 Indicators:

Indicator	Meaning	Action
 (BLUE) ILLUMINATED	Fan is running	No action needed
 (BLUE) 3 RAPID BLINKS	Fan paused	Try again after 30 seconds
 (RED) BLINKING	Battery low	Replace 3 AA soon
 (RED) ILLUMINATED	Battery dead	Replace 3 AA immediately
 (YELLOW) ILLUMINATED	Fragrance low	Replace refill & reset timer